

See page 3 for details of supply and installation

After flushing and cleaning the system must be filled with antifreeze mixture with protection to -10degC. The use of propylene glycol mixed with de-mineralised water is highly recommended and is included in the options portion of our quotations.

Start-up Guide Hydraulic Number 102




Pack 1 - LWD50A/SX + HMD1

Drawn; WJ IN-HP-01.2

Date; 21/01/19

E & OE

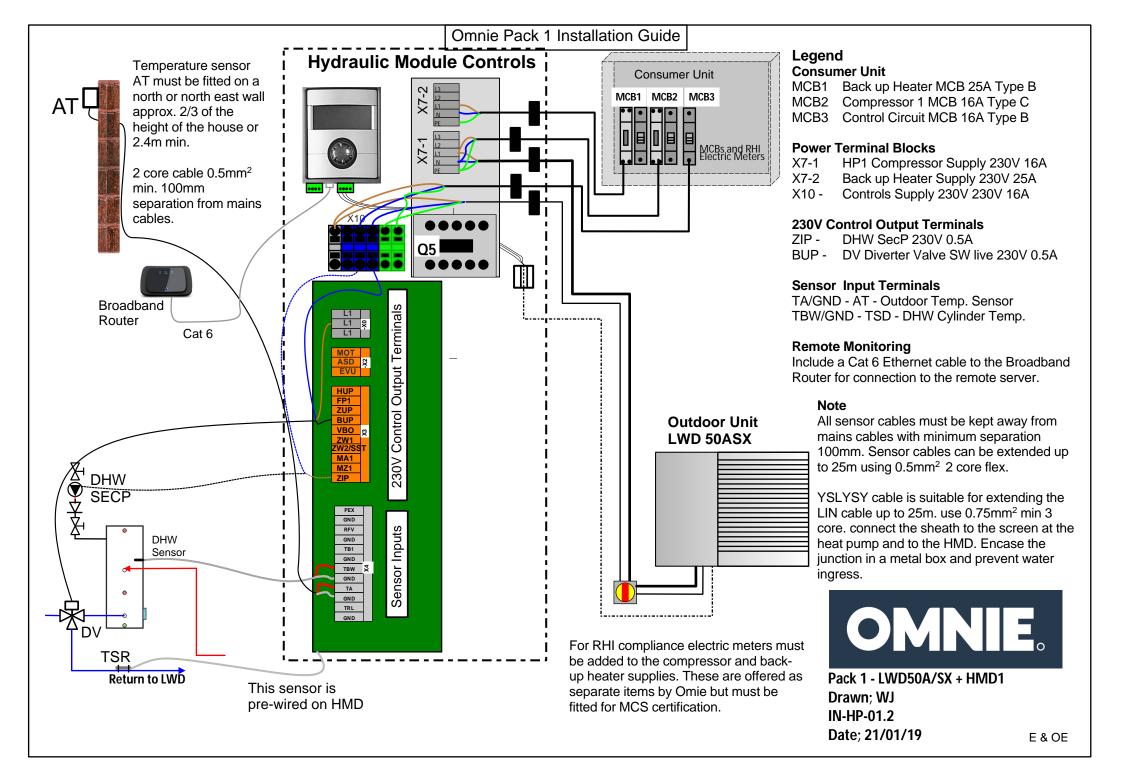

Omnie Pack 1 Installation Guide

System Components

Items Included in the Pack

HP1 - Outdoor Heat Pump unit 1 x LWD 50A/SX

HMD - Hydraulic Module 1 x HMD

B - Buffer Tank 1 x WPS61 + 2 x 1" reducers

AT - Outdoor Temperature Sensor 1 x Included in HMD

BPV - By-Pass Valve 3/4" 1 x UVD3/4" Br- Wall/Floor Mountings (Pair) 1 Pair (Choose) DV - 3 port Diverter Valve 1 x USV1" (22mm)

FH - Flexible Hoses 1" 1 x IPW1" C - DHW Cylinder Inc. Group Set C1 1 x TIM xxx

FB - Strainer Isolation Valve 1 x Filterball LKK522-1"f

Essential items listed in Quote Options - available from Omnie or by others

WD - Wall Duct 1 x WDF (Wall Penetration Kit)

GC - Glycol Catcher 1 x SOL-DCVS

Essential Items to be Supplied By Others

1 - All interconnecting Pipe, fittings, clips and insulation

2 - DHW Secondary Return Pump (ZIP)

3 - Drain Valve 34 BSP

4 - Auto Vent

5 - Defrost Drain 40mm Pushfit

The list is not extensive, refer to the Quote or Delivery note for full details of included items.

Electrical Items/Voltage, terminals on the control PCB

Sensors

TA = Ambient/Outdoor Temperature Sensor (Low Voltage)

TSR =Temperature Sensor Return (Low Voltage)

TSD = DHW Temperature Sensor (Low Voltage)

Pumps and Valves

DV = Diverter Valve Actuation Terminal 230V SECP = Secondary Circulation pump 230V

If extending the pre wired cables from the LWD unit use suitable cable for the conditions.

The LIN Bus cable can be extended using SY 3 core 0.75mm² Use the braid as the screen with continuity through to the HMD

Refer to the Operating Manuals for detailed information on installing the system. Each main item has it's own manual. See the main and supplementary manuals for the LWD and HMD. The set of Operating Manuals must be left with the customer.

Pipe sizes are provided for guidance only. The sizes given are for copper tube, if using an alternative material use the equivalent bore size. If the external runs are longer than 5m use the next size up. If using HDPE pipework 32mm is equal to 28m copper and is suitable up to 15m pipe run, if longer use 40mm. Avoid using elbows, pulled bends have lower pressure loss.

Maximum separation between outdoor unit and HMD is 25m pipework and cable.

All pipework must be well lagged, recommended 19mm wall thickness closed cell foam. Tape up slit pipe lagging, elbows and valves. Protect all external lagging from UV, rodent and bird damage. External lagging must be waterproof.

The pressure relief on the HMD must be run to a catchment vessel not to main drains. Glycol solution would be discharged in the event of a high pressure incident or when testing. This can be returned to the system if clean.

Enter the Hydraulic Diagram Number (102) in the Start up Guide at start-up.

Attention

This schematic is provided as a guide to the function of the heat pump system. It shows the general arrangement of the system components and is not a full system design. The installer is responsible for the final as installed design as fits the needs of the application and that the complete heating system complies with all statutory regulations and industry standards.

Isolating valves, pipe brackets, vents, filling flushing and drain points may have been omitted for clarity of function.

The safety devices shown are indicative only and the installer is responsible for ensuring that the system complies with all statutory regulations and that it functions in a safe and efficient manner.

Frost Protection and System Cleanliness are both vital to the longevity of the system. Fill the system initially with water to flush out debris and to hydraulically pressure and leak test. After disinfecting the system with biocide fill with premixed antifreeze solution. Omnie recommend a propylene glycol/demineralised water solution with inhibitors. This can be ordered from Pack 1 - LWD50A/SX + HMD1 Omnie in 20ltr drums. System failures caused by scaling or freezing may invalidate the heat pump warrantee.



Drawn; WJ IN-HP-01.2

Date; 21/01/19